



# SIMS - How to set up Alarm.com XML Receiver

12/28/2023 12:59 pm EST

SIMSIII Receiver needs to run in Administrator Mode

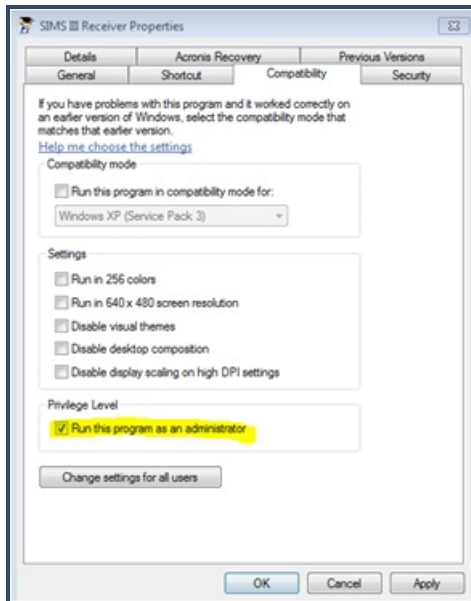


Select the XML Receiver in SIMSIII Receiver Server (SRSIII)

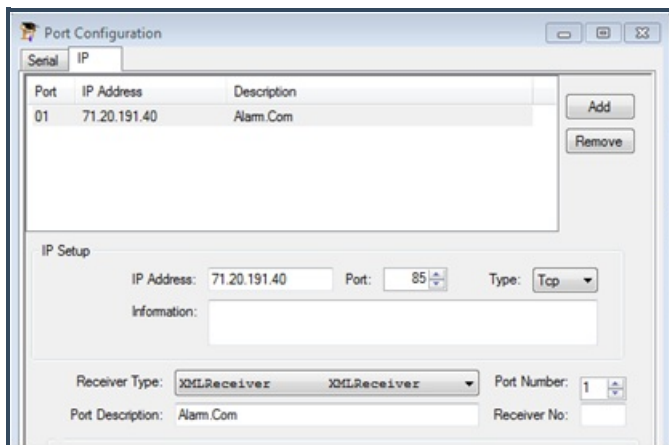

Type in the Alarm.Com IP address and the port

Click on the XML Configuration button and select Http

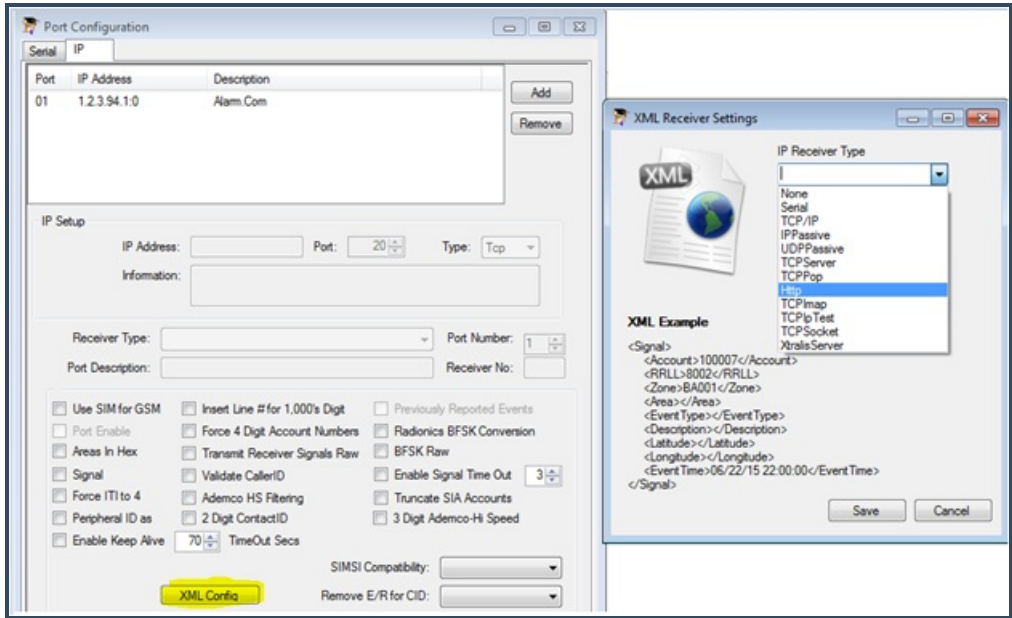

Once the configuration is complete, Click OK to save.

Signals should start coming in right away.

If signals do not come in, check to see if the firewall is enabled. You may need to make an exception for SIMSRCV3.EXE.