

HTVSI NVR

01/10/2024 5:00 pm EST

Video Type: HTVSI NVR

Connection Type: IP

Access Type: Direct connect to device (URL)

Notable Features, Limitations, and Recommended Usage:

Typical Configuration: HTVSI DVR server accessible via IP by the Central Station.

Software: The HTVSI DVR API is included in the install of VCC.

API Version: I8H-SDK 17.6.14.11

Available Options:

- Live Video
- Image Snapshot (to file, clipboard, or history)

Device Address Syntax:

IP Address: ###.###.###.###

or

Resolvable DNS Name: server.somewhere.com

Device Option Syntax:

<parameter>=<value>&<parameter>=<value> ...

Available User Options:

<parameter>= <value>	Acceptable Values	Description
camera=<int>	Single integer starting from 0	Camera number for this device. Required
user=<string>	Any string	The username that has permission to view live video on the camera. Required

password=<string>	Any string	The password for the user. Required
port=<int>	Integer	TCP port number used to connect to the DVR. Optional (default 80)