

Understanding Modem II/III Signals (Receiver Signals)

01/02/2024 2:08 pm EST

6RRLLaaaaaaAAAAXYYYY[DC4]

When used with the SURGARD interface, this protocol is compatible with the RADIONICS D6500 Mode, except that the protocol number is '6'.

Or 1RRLLaaaaaaAAAAXYYYY[DC4]

Where,

6 : Protocol number.

RR : Virtual Receiver number.

LLL : Virtual Line number.

aaaaaa : Account code or space depending on the number of account digits.

AAAA : Account code, if only 3 digits is received

(BFSK) a leading space will precede.

XX : Event code.

YYYY : Two digit zone codes or first two digit user codes, if less than four, zeros or leading spaces will precede.

[DC4] : Terminator, 14 Hex.* /